



## DTS HERITAGE

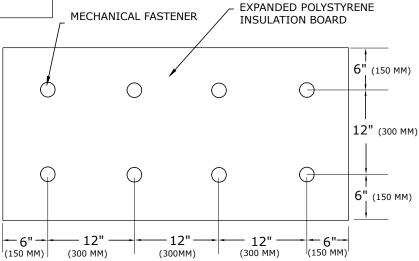

## SCREWABLE SHEATHING

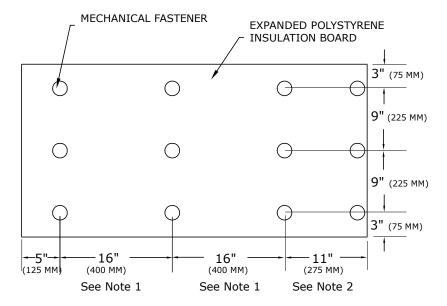

NON-SCREWABLE SHEATHING

## DDTS G1.06 DTS HERITAGE MECHANICAL FASTENER PATTERNS

DECOPLAST DTS HERITAGE - 6/1/2016 NOTES:

- 1. Fastener spacing not to exceed 16" (400 mm) center to center.
- 2. Variable not to exceed 11" (275 mm) Worst case spacing condition.

Disclaimer: The design, specifications, and construction shall comply with all local building codes and standards. Decoplast installation guidelines are for general information and guidance only and Decoplast specifically disclaims any liability for the use of this design, and for design, engineering, or workmanship of any project. The assembly shall be designed to prevent condensation within the assembly. The designer and the user shall provide final drawings and specifications. Products shown other than those manufactured by Decoplast are shown for clarity of the Decoplast product only. Contact the manufacturer of such other products for installation instructions.