


DTS HERITAGE

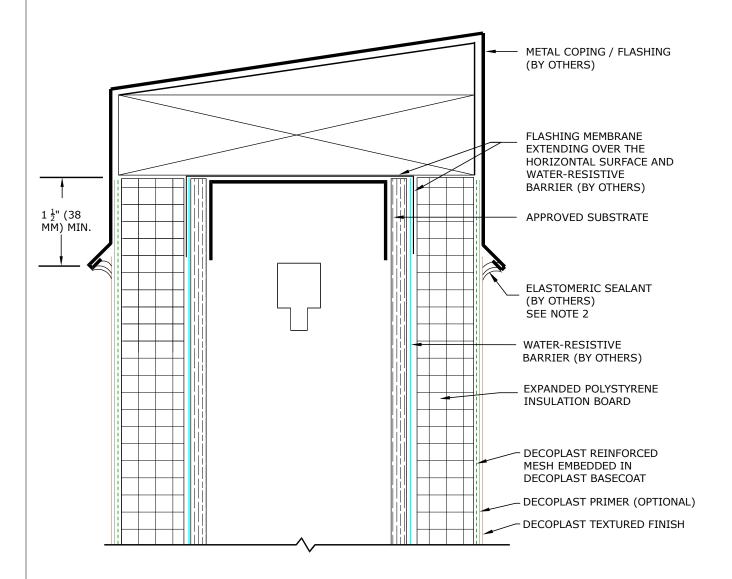

DDTS R1.03 DTS HERITAGE PARAPET WALL TERMINATION AT CAP FLASHING

DECOPLAST DTS HERITAGE - 6/1/2016

NOTES:

- 1. See DDTS G1.01 A, B or C for Drainage Options.
- 2. See DDTS G1.02 for Termination Options.
- 3. Some coping systems have an inner membrane that drains behind the metal flashing. Do not block drainage of these membranes with sealant.

Disclaimer: The design, specifications, and construction shall comply with all local building codes and standards. Decoplast installation guidelines are for general information and guidance only and Decoplast specifically disclaims any liability for the use of this design, and for design, engineering, or workmanship of any project. The assembly shall be designed to prevent condensation within the assembly. The designer and the user shall provide final drawings and specifications. Products shown other than those manufactured by Decoplast are shown for clarity of the Decoplast product only. Contact the manufacturer of such other products for installation instructions.